




FieldServer ENOTE

Update ProtoAir Firmware through Wi-Fi Access Point

Document Revision: 1.A
Date: 6/19
T18021

1 FIRMWARE DOWNLOAD INSTRUCTIONS FOR PROTOAIR


NOTE: The firmware file must be obtained from technical support.

1. Extract and save the new firmware file onto the local PC.
2. Click the  icon (found in the bottom-right corner of the computer screen) to open the available Wireless Network Connections.
3. Select the desired ProtoAir and click Connect.




4. Enter the Security key.

- **Default is 12345678**

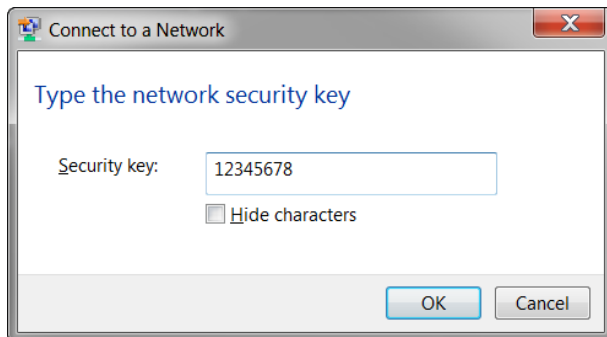


- The available Wireless Network Connection menu should now show that the computer is connected to the ProtoAir

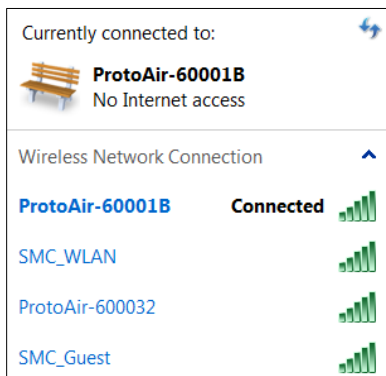

5. Open a web browser and type the IP Address of the FieldServer in the address bar.
 - Default IP Address is 192.168.1.50
 - Use the FS Toolbox utility if the IP Address is unknown


6. Go to the FS-GUI page:
 - a. From the Web Configurator page, click on the “Diagnostics and Debugging” button in the bottom right corner of the screen

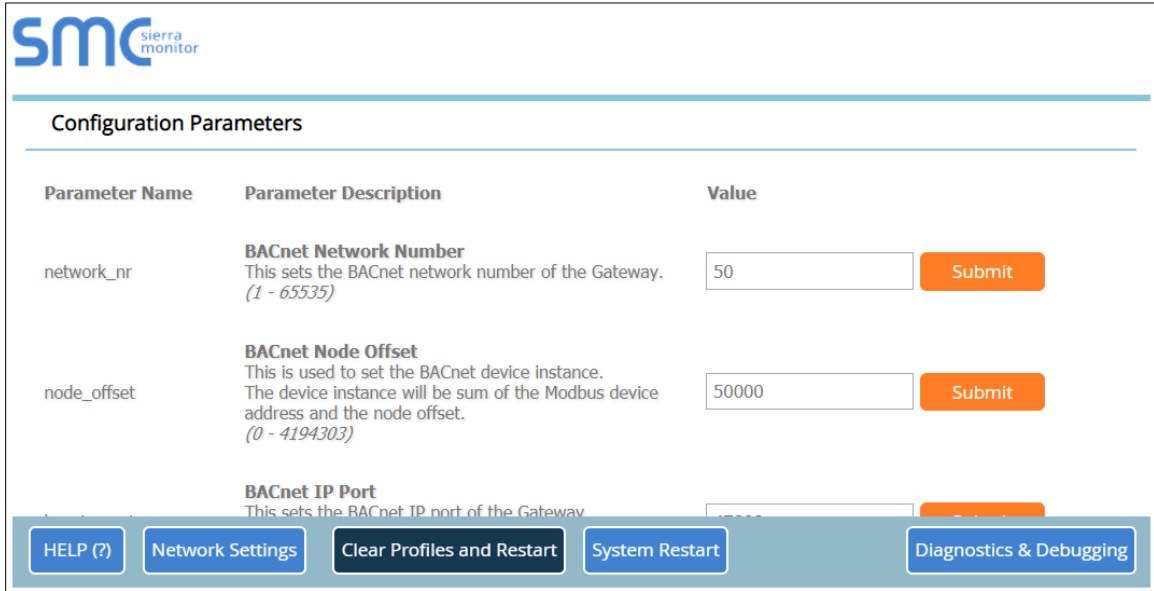

- b. From the System View Login page, click on the blue “Diagnostics” text at the bottom of the login page



7. Once on the FS-GUI page, go to the Navigation Tree found on the left-hand side of the screen and do the following:
 - a. Click on “Setup”
 - b. Click on “File Transfer”
 - c. Click on the “General” tab

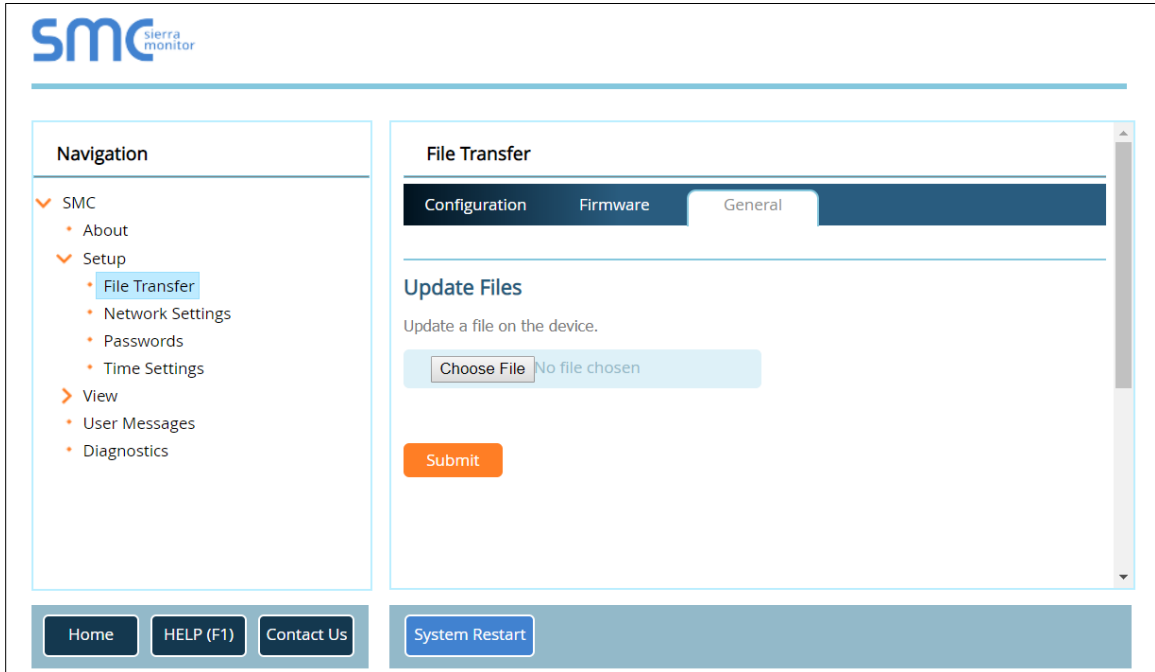

8. In the General tab, click on “Choose Files” and select the web.img file extracted in step 1.
9. Click on the orange “Submit” button.
10. When the download is complete, click on the “System Restart” button.

Technical Support

Thank you for purchasing the FieldServer from Sierra Monitor Corporation.

Please call us for any technical support needs related to the FieldServer product.

Sierra Monitor Corporation
1991 Tarob Court
Milpitas, CA 95035

Website: www.sierramonitor.com

U.S. Support Information:

+1 408 964-4443

+1 800 727-4377

Email: support@sierramonitor.com

EMEA Support Information:

+31 33 808 0590

Email: support.emea@sierramonitor.com